

YAMAHA RX-V1400 FACTORY PRESET PROCEDURES

All models require the **STANDBY/ON** button to be turned **OFF** to start the reset process.

NOTE: The remote control cannot be used during the reset procedure. All necessary buttons to complete the reset process are located on the front panel of the receiver. This procedure is not intended to correct intermittent shut-off symptoms or problems

MODEL: RX-V1400 (U.S.A. model/s)

(BEFORE YOU CONTINUE, PLEASE READ THE ABOVE NOTES!)

1. Before you start this procedure, locate the **PRESET/TUNING>** button and the **A/B/C/D/E** button on the Front Panel of the unit.

2. MAKE SURE THAT YOUR RECEIVER HAS BEEN TURNED OFF.

3. With the Right Hand, press and hold both the **PRESET/TUNING>** button and the **A/B/C/D/E** button down, **AT THE SAME TIME.**

With the Left Hand, press the **STANDBY/ON** button and **HOLD ALL 3** buttons for no more than **“3” SECONDS, AT THE SAME TIME.**

After 5 seconds, **#1** option should appear on the display, which will indicate that you are in the Diagnostics Mode.

4. Then rotate the **PROGRAM KNOB** until the display reads **#11. PRESET INHI.**

5. Press the **<PRESET/TUNING>** button (**ONCE**) and the display will change to **#11 PRESET RSRV.**

6. Turn the unit off by pressing the **STANDBY/ON** button.

7. Wait 5 seconds, then turn the unit on by pressing the **STANDBY/ON** button. You have now reset your component to the factory settings.

NOTE: Yamaha receivers don't have to be reset during normal operation. It is not recommended that you reset the receiver unless a setting has been changed that you are not aware of, or the receiver is not operating properly. The reset procedure will clear an incorrect setting that might be causing abnormal operation.