



1. RF transmit. [Remote = p.34]
2. Power on/off
3. Zones.
4. Sleep: p.173 (30, 60, 90, 120)
5. Party (toggle): p.189
6. **Scene**: p.174. For zone 1:
 - 1 = HDMI 1 (movie).
 - 2 = TUNER: *Band* (#14),
Tuning (hold to search)
 - 3 = Audio 2.
 - 4 = Net Radio.
 - 5 = HDMI 2 (STB).
 - 6 = HDMI 3 (game).
 - 7 = TV.
 - 8 = server (p.170)

7. **Input**: Select source
 - Tuner: p.156
 - NET: p.171
 - USB: p.168
 - Bluetooth: p.165

- Colour keys: [Assign p. 317]:
- For TV Display
 - Red**: Exit dimmer
 - Green**: Info brighter
 - Yellow**: Brdcast previous
 - Blue**: Input next

8. **Preset**: recall (or store):
 - radio station p.159,
 - BT, USB, network (p.179)

9. **OPTION** (≡): p.193
 - Tone**: L, R, C, sub ± 6 dB
 - YPAO on/off, adaptive
 - Dialog*: height, level.
 - Lipsync* (0-500 ms)

Compressed Enhancer: per input. Hi-res mode applies to FLAC also.
Volume trim: per input (± 6 dB). / *Extra bass*: = LFE+Main
Video processing: if processing, sets res, aspect, adjust (1-6) per input.
Video out: set video source to use with a non-HDMI audio input.
Shuffle / repeat songs (p.208). *Favourites* folder p.210. *Status* info.

10. **SETUP** (⚙): p.215

Speaker: config, levels, YPAO result, Parametric **EQ** (p.236)

Sound: lipsync, DSP, all-chan stereo, vol-range, jitter, balance.

Scene: what's set, naming (p.264).

Video/HDMI: mode, res, **arc**, output, format (p.266)

Network: IP, standby, name, MusicCast (p.279)

Bluetooth: disconnect, standby, transmitter (p.288)

MultiZone: levels, names (p.294)

System: p.306: input skip, display, auto-play, dimmer, beep,
trigger, zones, eco, lock, reset, backup, firmware.

11. Enter/cursor keys (for menu shown on TV screen)

12. Help (when "?" shown in on-screen menu)

13. **Sound Mode**: Cinema DSP HD³ (p.134) [Assign *Program* keys: p. 316]

Program: music halls, movie (mono, enhanced), stereo (2/all-chan).

Straight: output what's input unprocessed (stereo/5.1). (p.140).

Sur.Decode: select decoder: Auto, Dolby Surround, or Neural:X.

Enhancer: improve compressed music. (p.144)

14. **Playback** of selected *Input* device (#7 left) (p.150)

Mode for DAB = initial scan; twice for TuneAid.

Preset (#8) & *Memory* to store stations (*Memory* for 3 sec to clear).

Use front panel dial to select what to display (p.161)

Bluetooth, Airplay, USB, PC/Nas, Net Radio, Streaming (p.165-172)

15. HDMI Out: set output socket(s) p.151. [eArc = HDMI Out 1]

16. **Pure direct**: bypass sound programs, zones, setup, display. Toggle p.142.

17. Control other (HDMI-compatible) device: *TopMenu*, *Home*, *PopupMenu*.

18. **AI**: Toggle *Surround:AI* balance of dialog, music, ambients, effects (p.132)

19. Volume

20. Mute.

For DAB to display mono/stereo and bit rate, tune to the station. Then use Select/Enter on the front panel to display the *Audio Mode*. (p.161).

Note: [DO NOT](#) set *Extra Bass* on if main speakers are set to “Small.” (Extra Bass = LFE+Main. If Main speakers are Large, Extra Bass is flat.