



① **POWER**

Press upward or downward to turn on or off this unit.



The POWER indicator above lights up when this unit is turned on.

② **Remote control sensor**

Receives signals from the remote control.

③ **SA-CD/CD**

Switches the playback layer of a hybrid SA-CD between SA-CD and CD.



The SA-CD/CD indicator above lights up when the SA-CD layer is selected.

This setting is retained even if you turn off this unit.

⑤ **Disc tray**

Loads a disc.



Turns on the PURE DIRECT mode to improve audio quality:
 • The PURE DIRECT indicator above lights up.
 • The digital output is turned off.
 • The front panel display is turned off.

The least indicators and messages are still displayed in the front panel display.
 • Press again to turn off the PURE DIRECT mode.
 • This setting is retained even if you turn off this unit.